


Instructions For Assembling and Installing


1

SET SIDE AND CORNER PIECES AS SHOWN. USE LONG BOLTS, LEAVING APPROXIMATELY 3/4" SPACE BETWEEN TO DRAW AROUND CHIMNEY.

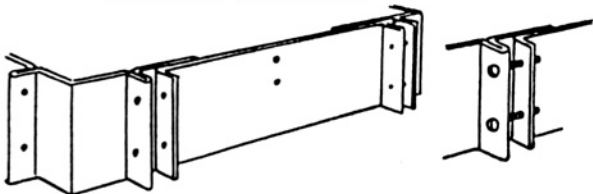


2

ATTACH SUPPORT BRACES TO INSIDE OF BAND.

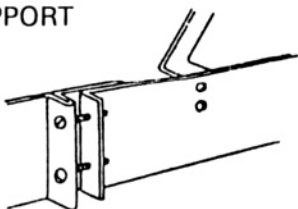

3

ATTACH TOP TO SUPPORT BRACES.

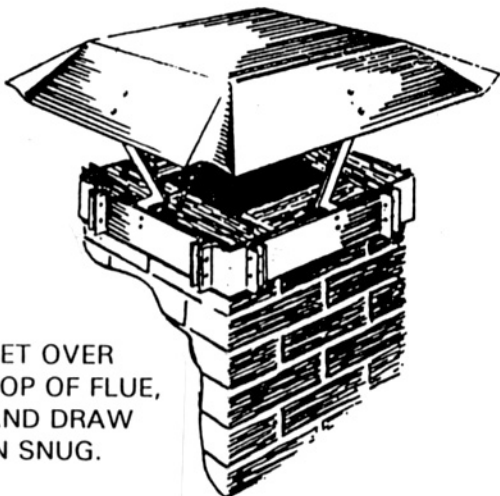

4

SET OVER TOP OF FLUE, AND DRAW IN SNUG.

HYC

Company, Inc.

THE MARK OF QUALITY... SINCE 1947